

# Betriebsanleitung Trennverstärker SIRAX TV 808-61

## Mode d'emploi Amplificateur-Séparateur SIRAX TV 808-61

### Operating Instructions Isolating amplifier SIRAX TV 808-61



TV 808-61 Bd-f-e

125 171-01

06.05

Camille Bauer AG  
Aargauerstrasse 7  
CH-5610 Wohlen/Switzerland  
Telefon +41 56 618 21 11  
Telefax +41 56 618 35 35  
e-mail: info@camillebauer.com  
<http://www.camillebauer.com>



# **Betriebsanleitung**

**Trennverstärker SIRAX TV 808-61 ..... Seite 4**

## **Mode d'emploi**

**Amplificateur-Séparateur SIRAX TV 808-61 ..... Page 9**

## **Operating Instructions**

**Isolating amplifier SIRAX TV 808-61 ..... Page 14**

Sicherheitshinweise, die unbedingt beachtet werden müssen, sind in dieser Betriebsanleitung mit folgenden Symbolen markiert:



Les conseils de sécurité qui doivent impérativement être observés sont marqués des symboles ci-contre dans le présent mode d'emploi:



The following symbols in the Operating Instructions indicate safety precautions which must be strictly observed:



Geräte dürfen nur fachgerecht entsorgt werden!

Les appareils ne peuvent être éliminés que de façon appropriée!

The instruments must only be disposed of in the correct way!









## 11. Montage

Der Trennverstärker SIRAX TV 808 wird auf einen Geräteträger BP 902 aufgesteckt.



Bei der Festlegung des Montageortes (Messortes) ist zu beachten, dass die **Grenzen** der Betriebstemperatur **nicht überschritten** werden:  
-25 und + 40 °C bei Standard-Geräten  
-20 und + 40 °C bei **Ex**-Geräten!

### 11.1 Steck-Modul auf Geräteträger aufstecken



Vor dem Einstecken des SIRAX TV 808 in den Geräteträger unbedingt sicher stellen, ...  
... dass die Elektrischen Anschlüsse des Geräteträgers mit dem Anschlussplan des Steck-Moduls übereinstimmen  
... dass der Geräteträger gemäss Abschnitt «Mechanische Codierung des Geräteträgers» richtig codiert ist. Betriebsanleitung des Geräteträgers beachten.  
... dass bei **SIRAX Steck-Modulen mit 24...60 V DC/AC Hilfsenergie** der Codier-einsatz B aus dem Geräteträger entfernt ist. Dass die Hilfsenergiequelle den richtigen Kleinspannungswert führt.

1. Steck-Modul auf Federleiste aufstecken.
2. Schnellverschluss bei vertikaler Einbaurlage des Geräteträgers in vertikale Position bringen, bei horizontaler Einbaurlage in horizontale Lage stellen.
3. Schnellverschluss mit Schraubendreher eindrücken, bis dieser hörbar einrastet.

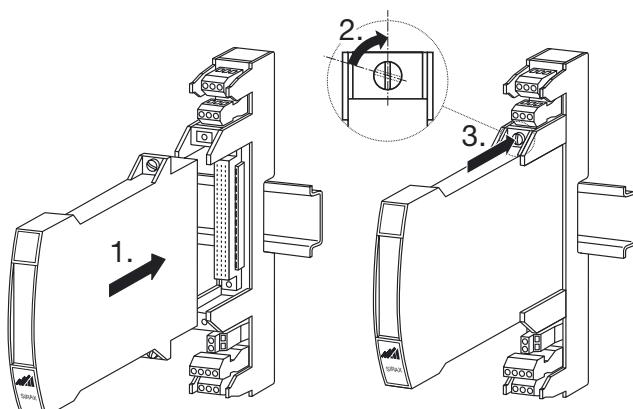


Bild 8. Steck-Modul aufstecken.

## 12. Inbetriebnahme

Messeingang und Hilfsenergie einschalten. Nach dem Einschalten der Hilfsenergie leuchtet die grüne Leuchtdiode dauernd.



Beim Einschalten der Hilfsenergie muss die Hilfsenergiequelle kurzzeitig genügend Strom abgeben können. Die Trennverstärker benötigen nämlich einen Anlaufstrom  $I_{Anlauf}$  von ...  
...  $I_{Anlauf} \geq 160$  mA bei der Ausführung mit dem Hilfsenergie-Bereich 24 – 60 V DC/AC  
oder  
...  $I_{Anlauf} \geq 35$  mA bei der Ausführung mit dem Hilfsenergie-Bereich 85 – 230 V DC/AC

## 13. Wartung

Der Trennverstärker ist wartungsfrei.

## 14. Demontage-Hinweis

1. Schnellverschluss um 90° drehen.
2. Steck-Modul herausziehen.

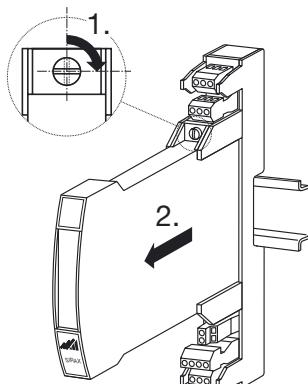


Bild 9. Steck-Modul herausziehen.

## 15. Mass-Skizze

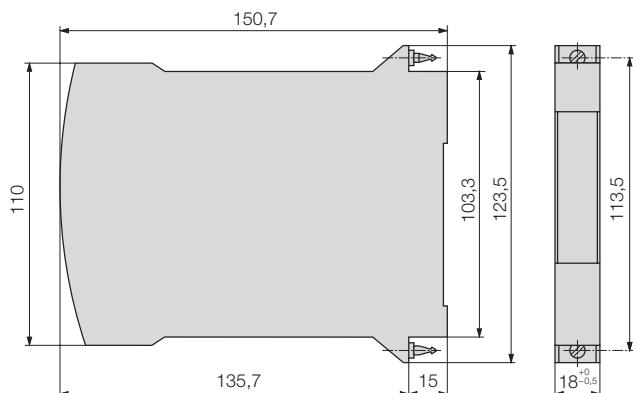


Bild 10. SIRAX TV 808 im Gehäuse B17.









## 11. Montage

L'amplificateur de séparation SIRAX TV 808 est embroché dans un support d'appareils BP 902.



Pour la détermination de l'endroit de montage (endroit de mesure) il faut faire attention que les **valeurs limites** de la température de fonctionnement **ne soient pas dépassées**:

- 25 et + 40 °C pour appareils standard
- 20 et + 40 °C pour appareils en Ex!

### 11.1 Monter le module embrochable dans un support d'appareils



Avant d'embrocher le SIRAX TV 808 dans le support d'appareils, vérifier sans faute ...  
... la concordance des raccordements électriques du support et du plan de bornes du module embrochable  
... le codage correct du support d'appareils selon chapitre «Codage mécanique du support d'appareils». Respecter les indications du mode d'emploi du support d'appareils.  
... que pour des modules embrochables SIRAX avec alimentation auxiliaire 24...60 V CC/CA, le bouchon de codage B du support d'appareils soit enlevé et que la source d'alimentation fournit la faible tension correcte.

1. Enficher le module embrochable.
2. Amener la fixation rapide dans la position verticale pour montage vertical de l'appareil, dans la position horizontale pour montage horizontal.
3. Enfoncer à l'aide d'un tournevis la fixation rapide jusqu'à ce que l'on entende l'encliquetage.

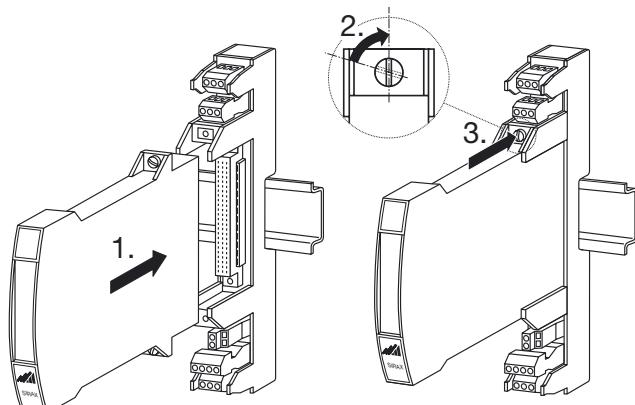


Fig. 8. Enficher le module embrochable.

## 12. Mise en service

Enclencher le circuit d'entrée de mesure et l'alimentation auxiliaire. Après l'enclenchement de la tension auxiliaire, la diode verte reste allumée en permanence.



Lors de l'enclenchement de l'énergie auxiliaire de l'amplificateur de séparation, la source d'alimentation doit fournir pendant un court laps de temps en courant suffisamment élevé, ceci du fait que le SIRAX TV 808 nécessite un courant de démarrage  $I_{\text{démarrage}}$  de ...

...  $I_{\text{démarrage}} \geq 160 \text{ mA}$  pour la version avec le bloc d'alimentation auxiliaire 24 – 60 V CC/CA

ou

...  $I_{\text{démarrage}} \geq 35 \text{ mA}$  pour la version avec le bloc d'alimentation auxiliaire 85 – 230 V CC/CA

## 13. Entretien

L'amplificateur de séparation ne nécessite pas d'entretien.

## 14. Instructions pour le démontage

1. Tourner la fixation rapide de 90°.
2. Retirer le module embrochable.

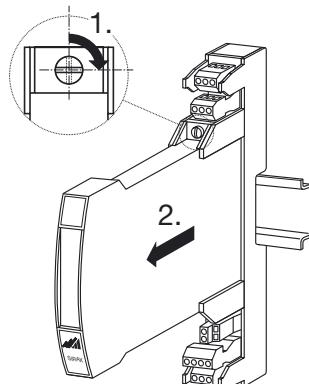


Fig. 9. Retirer le module embrochable.

## 15. Croquis d'encombrement

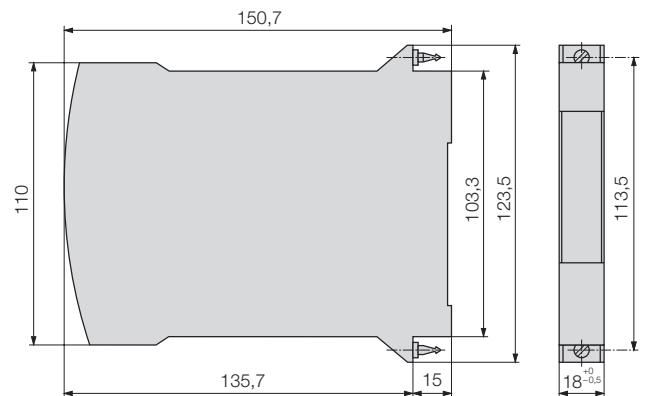



Fig. 10. SIRAX TV 808 en boîtier B17.

# Operating Instructions

## Isolating amplifier SIRAX TV 808-61

### Contents

1. Read first and then...	14
2. Scope of supply	14
3. Ordering informations	14
4. Brief description	15
5. Overview of the parts	15
6. Technical data	15
7. Mechanical coding of the plug-in module	16
8. Electrical connections	16
9. Withdrawing and inserting the device	17
10. Configuration of the isolating amplifier	17
11. Mounting	18
12. Commissioning	18
13. Maintenance	18
14. Releasing the isolation amplifier	18
15. Dimensional drawing	18
16. Declaration of conformity	19

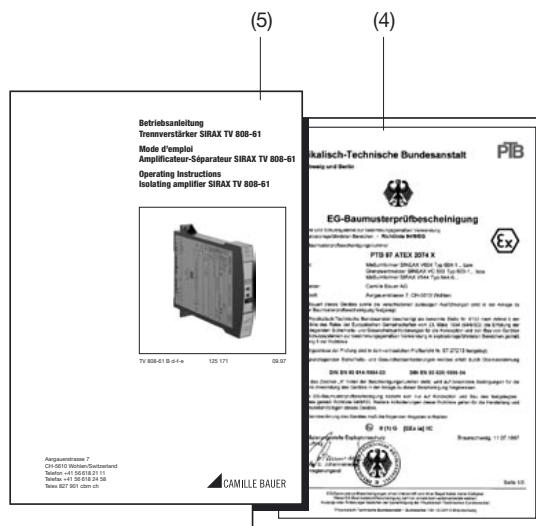

### 1. Read first and then ...



The proper and safe operation of the device assumes that the Operating Instructions are **read** and the safety warnings given in the various Sections

- 7. Mechanical coding of the plug-in module
- 8. Electrical connections
- 11. Mounting
- 12. Commissioning


are **observed**.

The device should only be handled by appropriately trained personnel who are familiar with it and authorised to work in electrical installations.

The instrument must only be opened for configuration, as described in section "10. Configuration of the isolating amplifier"!

The guarantee is no longer valid if the instrument is further tampered with!

### 2. Scope of supply (Fig. 1)

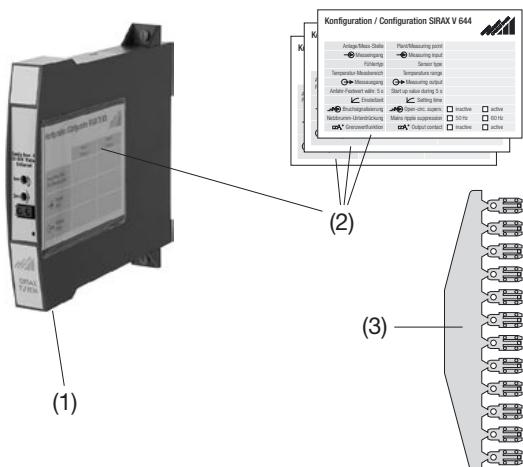

### Isolating amplifier (1)

#### 3 Data cards (2) (for recording configured settings)

#### 1 Coding comb (3)

(for coding the backplane SIRAX BP 902)

#### 1 Type Examination Certificate (4) (for Ex version devices only)

#### 1 Operating Instructions (5), in three languages: German, French, English

### 3. Ordering informations

DESCRIPTION	MARKING
1. Mechanical design	
Housing B17	808 - 6
2. Number of channel	
1 channel	1
3. Version / Power supply →○	
Standard, 24 ... 60 V DC/AC	1
Standard, 85 ... 230 V DC/AC	2
[EEx ia] IIC, 24 ... 60 V DC/AC Input intrinsically safe	3
[EEx ia] IIC, 85 ... 110 V DC/230 V AC Input intrinsically safe	4
4. Function	
1 input, 1 electrically insulated output	1
5. Input signal →○	
Input acc. to type label	[V] 9
Input acc. to type label	[mA] Z
6. Output signal ○→	
Output acc. to type label	[V] 9
Output acc. to type label	[mA] Z



Annual mean  
relative humidity: ≤ 75%  
Altitude: 2000 m max.  
Indoor use statement!

## 7. Mechanical coding of the plug-in module



Where there is a danger of inserting a module in the wrong slot, the possibility has to be excluded as prescribed in EN 50 020, Section 6.3.2. **To this end, the units must be supplied already equipped with coding inserts as shown in Figures 3 and 4.**

808-611	Order Type	808-612

Power supply  
24...60 V DC/AC      Power supply  
85...230 V DC/AC

Fig. 3. Coding of the plug-in module SIRAX TV 808 in **standard (non-Ex) version**.

808-613	Order Type	808-614

Power supply  
24...60 V DC/AC      Power supply  
85...110 V DC /  
85...230 V AC

Fig. 4. Coding of the plug-in module SIRAX TV 808 in **[EEx ia] IIC version**.

## 8. Electrical connections

The isolating amplifier SIRAX TV 808 is plugged onto a backplane BP 902. A 96 pin connector (model C, DIN 41 612) establishes the electrical connections between the isolating amplifier and the backplane. The pin connections can be seen from Fig. 5.

**Please refer to our backplane instructions for the backplane wiring.**



Make sure that the cables are not live when making the connections!

**The 230 V power supply is potentially dangerous!**



In the case of "Intrinsically safe" explosion-proof versions [EEx ia] IIC, the supplementary information given on the Type Examination Certificate and also local regulations applicable to electrical installations in explosion hazard areas must be taken into account.



Also note that, ...

... the data required to carry out the prescribed measurement must correspond to those marked on the nameplate of SIRAX TV 808 (→ measuring input, → measuring output, → power supply!).

... the total loop resistance connected to the output (receiver plus leads) **does not** exceed the maximum permissible value  $R_{ext. \max.}$ , see **Measuring output**" in Section "5. Technical data" for the maximum values of  $R_{ext.}$ !

... the measurement input and output cables should be twisted pairs and run as far as possible away from heavy current cables!

In all other respects, observe all local regulations when selecting the type of electrical cable and installing them!



## 11. Mounting

The isolating amplifier SIRAX TV 808 is plugged onto a backplane BP 902.



When deciding where to install the transmitter (measuring location), take care that the **limits** of the operating temperature **are kept**:  
– 25 and + 40 °C for standard instruments  
– 20 and + 40 °C for instruments in **Ex** version!

### 11.1 Plugging the module into the backplane



- Before inserting the SIRAX TV 808 into the backplane, ensure that, ...  
... the backplane wiring is in strict accordance with the wiring diagram of the module  
... **the backplane is coded correctly according to the section entitled “Mechanical coding of the backplane”**. Read the instructions for the **backplane**.  
... the red coding insert has been removed from the backplane for SIRAX plug-in modules with a power supply of 24...60 V DC/AC and that the power supply is correct for the module.

1. Clip the module base onto the top-hat rail.
2. If the backplane is mounted vertically, turn the quick release screws on the module to a vertical position, respectively if it is mounted horizontally, turn the screws to a horizontal position.
3. Press the quick release screws inwards with the screwdriver until there is an audible click.

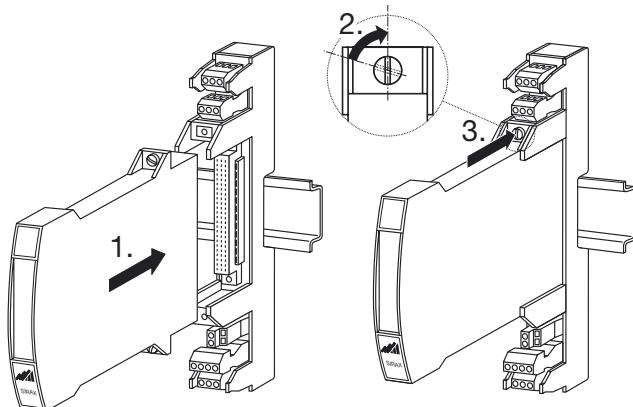


Fig. 8. Plug the module into the base.

## 12. Commissioning

Switch on the measuring input and the power supply. The green LED lights continuously after switching on.



The power supply unit must be capable of supplying a brief current surge when switching on. The isolating amplifier presents a low impedance at the instant of switching which requires a current  $I_{start}$  of ...  
...  $I_{start} \geq 160$  mA for the version with a power supply range of 24 – 60 V DC/AC  
or  
...  $I_{start} \geq 35$  mA for the version with a power supply range of 85 – 230 V DC/AC

## 13. Maintenance

No maintenance is required.

## 14. Releasing the isolating amplifier

1. Rotate the quick release screws 90° .
2. Withdraw the plug-in module.

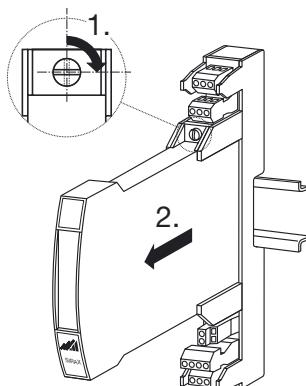


Fig. 9. Withdraw the module from the base.

## 15. Dimensional drawing

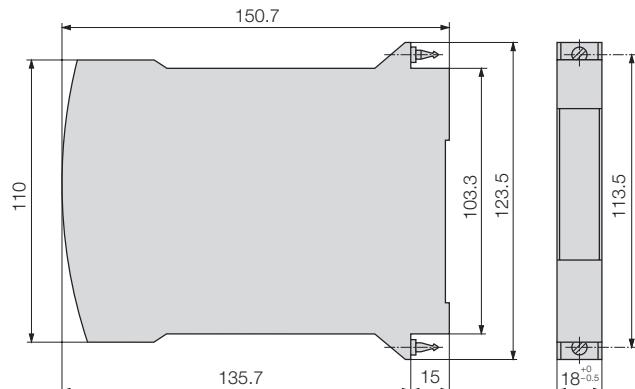


Fig. 10. SIRAX TV 808 in housing **B17**.

## 16. Konformitätserklärung / Certificat de conformité / Declaration of conformity

Standard, nicht-Ex /standard, non-Ex / standard, non-Ex



### EG - KONFORMITÄTSERKLÄRUNG DECLARATION OF CONFORMITY



Dokument-Nr./  
Document.No.:

TV808NEX.DOC

Hersteller/  
Manufacturer:

**Camille Bauer AG**  
Switzerland

Anschrift /  
Address:

**Aargauerstrasse 7**  
**CH-5610 Wohlen**

Produktbezeichnung/  
Product name:

**Tennverstärker**  
Isolation amplifier

Typ / Type:

**SIRAX TV 808**

Das bezeichnete Produkt stimmt mit den Vorschriften folgender Europäischer Richtlinien überein,  
nachgewiesen durch die Einhaltung folgender Normen:

The above mentioned product has been manufactured according to the regulations of the following  
European directives proven through compliance with the following standards:

Nr. / No.	Richtlinie / Directive	
89/336/EWG	Elektromagnetische Verträglichkeit - EMV - Richtlinie	
89/336/EEC	Electromagnetic compatibility -EMC directive	
EMV / EMC	Fachgrundnorm / Generic Standard	Messverfahren / Measurement methods
Störfestigkeit / Immunity	EN 50 082-2 : 1994	IEC 1000-4-2 : 1991 IEC 1000-4-3 : 1995 IEC 1000-4-4 : 1988 IEC 1000-4-5 : 1995 IEC 1000-4-6 : 1995 IEC 1000-4-11 : 1993
Nr. / No.	Richtlinie / Directive	
73/23/EWG	Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungs-grenzen - Niederspannungsrichtlinie - CE-Kennzeichnung : 95	
73/23/EEC	Electrical equipment for use within certain voltage limits - Low Voltage Directive - Attachment of CE mark : 95	
EN/Norm/Standard	IEC/Norm/Standard	
EN 61 010-1 : 1993	IEC 1010-1 : 1990 + A1 : 1992	

Ort, Datum /  
Place, date:

Wohlen, den 24. August 1998

Unterschrift /

M.Ulrich

Signature:

Leiter Entwicklung

Diese Erklärung bescheinigt die Übereinstimmung mit den  
genannten Richtlinien, beinhaltet jedoch keine Zusicherung  
von Eigenschaften. Die Sicherheitshinweise der mitgelieferten  
Produktdokumentationen sind zu beachten.

This declaration certifies compliance with the above mentioned  
directives but does not include a property assurance.  
The safety notes given in the product documentations, which are  
part of the supply, must be observed.

